

FLOWMAK®

BOMBAS POZOS DE 6"
SERIE 6SP




**PUNTO
BOMBAS**
Equipos para sistemas de bombeo

50HZ


Total head(M)

Performance curve

6SP46

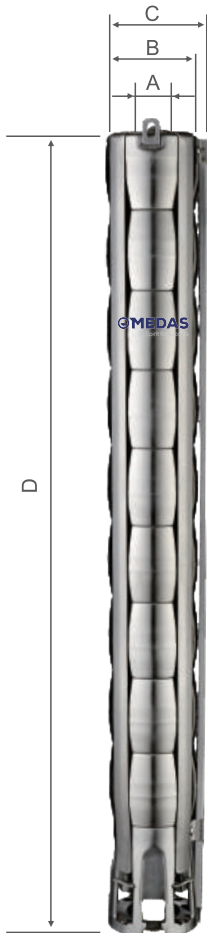

2850RPM

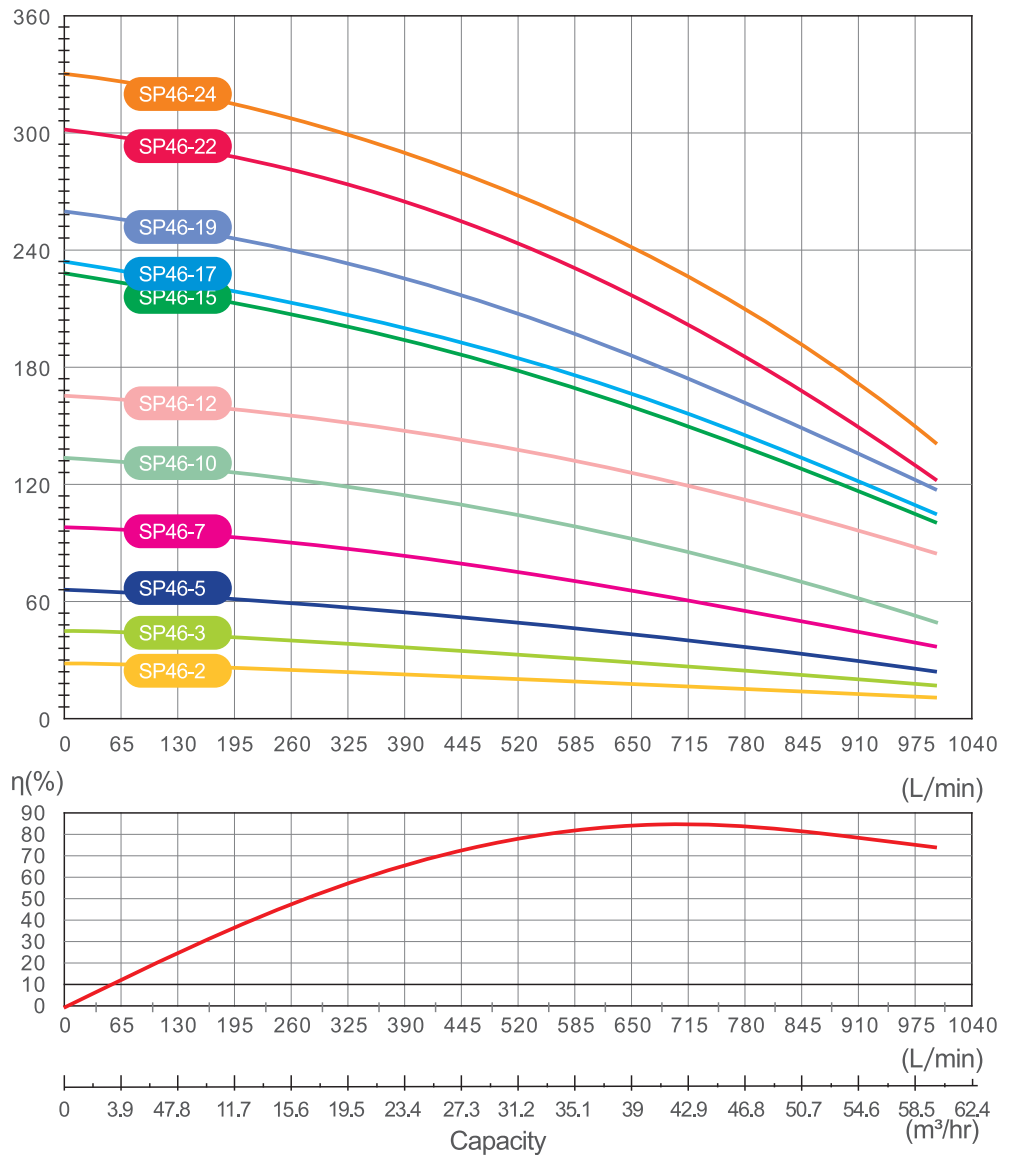


6SP46

| TYPE | DIMENSIONS(mm) | | | | WEIGHT kg | MOTOR | | HEAD M | m³/h | | | | | |
|----------|----------------|-----|-----|------|--------------|-------|------|-----------|-------|-----|-----|-----|-----|-----|
| | A | B | C | D | | KW | HP | | 0 | 15 | 24 | 30 | 46 | 60 |
| | | | | | | | | | L/min | | | | | |
| 6SP46-02 | 4" | 132 | 152 | 496 | 7.64 | 3.00 | 4.00 | 17 | 28 | 27 | 24 | 22 | 17 | 10 |
| 6SP46-03 | | | | 609 | 10.14 | 5.50 | 7.50 | 26 | 44 | 41 | 39 | 36 | 26 | 17 |
| 6SP46-05 | | | | 835 | 15.14 | 7.50 | 10.0 | 44 | 66 | 64 | 55 | 53 | 44 | 24 |
| 6SP46-07 | | | | 1061 | 20.14 | 11.0 | 15.0 | 61 | 98 | 86 | 85 | 80 | 61 | 37 |
| 6SP46-10 | | | | 1400 | 27.64 | 15.0 | 20.0 | 88 | 137 | 134 | 117 | 107 | 88 | 50 |
| 6SP46-12 | | | | 1626 | 32.64 | 18.5 | 25.0 | 105 | 165 | 162 | 142 | 130 | 105 | 85 |
| 6SP46-15 | | | | 1965 | 40.14 | 22.0 | 30.0 | 132 | 212 | 208 | 180 | 167 | 132 | 100 |
| 6SP46-17 | | | | 2191 | 45.14 | 26.0 | 35.0 | 149 | 234 | 222 | 200 | 186 | 149 | 105 |
| 6SP46-19 | | | | 2417 | 50.14 | 30.0 | 40.0 | 167 | 260 | 248 | 224 | 208 | 167 | 118 |
| 6SP46-22 | | | | 2756 | 57.64 | 37.0 | 50.0 | 193 | 302 | 288 | 260 | 241 | 193 | 123 |
| 6SP46-24 | | | | 2982 | 62.64 | 37.0 | 50.0 | 211 | 330 | 317 | 287 | 265 | 211 | 140 |



50HZ

Total head(M)

Performance curve

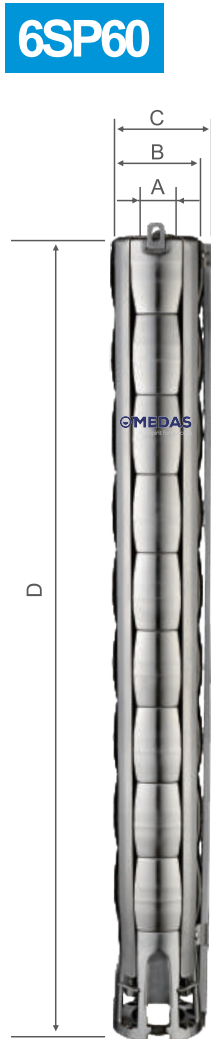

6SP60

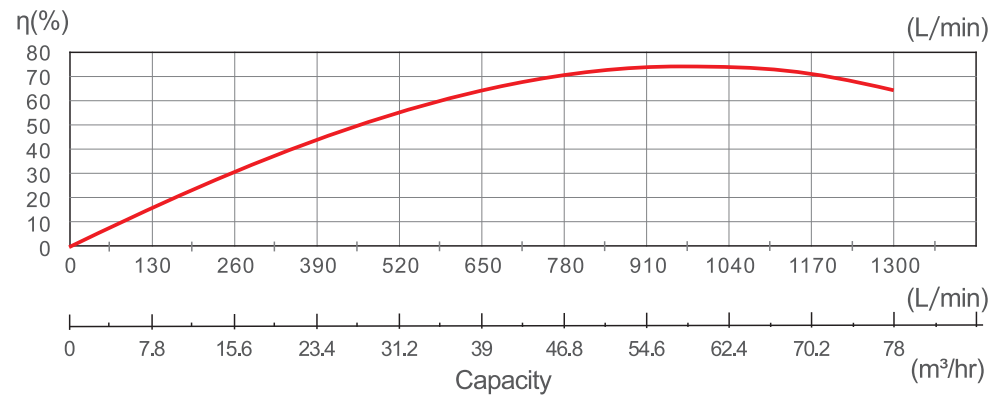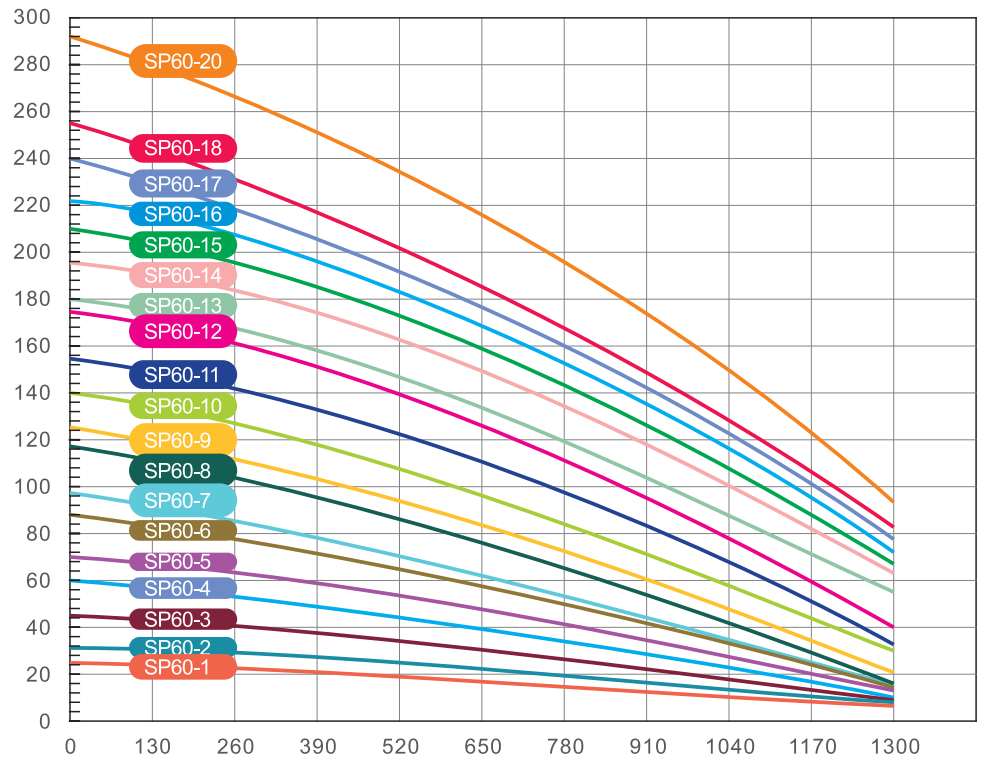

2850RPM

6SP60

| TYPE | DIMENSIONS(mm) | | | | WEIGHT kg | MOTOR | | HEAD M | Capacity | | | | | |
|----------|----------------|-----|-----|------|--------------|-------|------|-----------|-------------------|-----|-----|-----|-----|----|
| | A | B | C | D | | KW | HP | | m ³ /h | | | | | |
| | | | | | | | | | 0 | 18 | 27 | 42 | 60 | 78 |
| 6SP60-01 | 4" | 132 | 152 | 383 | 6.27 | 2.20 | 3.00 | 8 | 25 | 22 | 21 | 16 | 8 | 7 |
| 6SP60-02 | | | | 496 | 8.52 | 4.00 | 5.00 | 15 | 31 | 29 | 27 | 20 | 15 | 8 |
| 6SP60-03 | | | | 609 | 10.77 | 5.50 | 7.50 | 23 | 45 | 44 | 40 | 30 | 23 | 9 |
| 6SP60-04 | | | | 722 | 13.02 | 7.50 | 10.0 | 31 | 60 | 56 | 50 | 38 | 31 | 10 |
| 6SP60-05 | | | | 835 | 15.26 | 9.20 | 12.5 | 38 | 70 | 67 | 62 | 50 | 38 | 13 |
| 6SP60-06 | | | | 948 | 17.51 | 11.0 | 15.0 | 46 | 88 | 84 | 74 | 61 | 46 | 14 |
| 6SP60-07 | | | | 1061 | 19.76 | 13.0 | 17.5 | 54 | 97 | 94 | 86 | 70 | 54 | 15 |
| 6SP60-08 | | | | 1174 | 22.01 | 15.0 | 20.0 | 62 | 117 | 107 | 95 | 81 | 62 | 16 |
| 6SP60-09 | | | | 1287 | 24.26 | 18.5 | 25.0 | 70 | 125 | 120 | 110 | 93 | 70 | 21 |
| 6SP60-10 | | | | 1400 | 26.51 | 18.5 | 25.0 | 77 | 140 | 135 | 125 | 102 | 77 | 30 |
| 6SP60-11 | | | | 1513 | 28.76 | 22.0 | 30.0 | 85 | 156 | 150 | 135 | 110 | 85 | 33 |
| 6SP60-12 | | | | 1626 | 31.01 | 22.0 | 30.0 | 93 | 174 | 162 | 145 | 115 | 93 | 40 |
| 6SP60-13 | | | | 1739 | 33.26 | 26.0 | 35.0 | 101 | 180 | 173 | 160 | 132 | 101 | 57 |
| 6SP60-14 | | | | 1852 | 35.51 | 26.0 | 35.0 | 108 | 194 | 188 | 175 | 142 | 108 | 63 |
| 6SP60-15 | | | | 1965 | 37.76 | 26.0 | 35.0 | 116 | 210 | 203 | 187 | 152 | 116 | 67 |
| 6SP60-16 | | | | 2078 | 40.01 | 30.0 | 40.0 | 124 | 222 | 216 | 200 | 162 | 124 | 72 |
| 6SP60-17 | | | | 2191 | 42.26 | 30.0 | 40.0 | 132 | 240 | 230 | 214 | 175 | 132 | 78 |
| 6SP60-18 | | | | 2304 | 44.51 | 37.0 | 50.0 | 140 | 255 | 243 | 226 | 190 | 140 | 83 |
| 6SP60-20 | | | | 2530 | 49.01 | 37.0 | 50.0 | 155 | 288 | 267 | 248 | 201 | 155 | 90 |

FLOWMAK[®]

**PUNTO
BOMBAS**
Equipos para sistemas de bombeo

www.puntobombas.cl